



MoonLight 2 Set-Up Instructions

PRO TIP: Watch the setup video on TheTentLab.com and set-up your tent once before you take it on a trip

- * Select a spot for your tent that is smooth but slightly angled for drainage. Sleep with your heads UP-slope.
- * Avoid sites where overhead dead branches or nearby dead trees could fall on you.


What's included

- Tent and Rainfly
- Main stuffsack
- Poles and bag
- 12 stakes and bag
- Pole repair tube
- Fabric for repairs
- 4 Micro biners
- 4 cords (see hack*)

1) Assemble the EyePole before putting it into the tent. <<for take-down, remove the EyePole before disassembling>>

A) The EyePole starts with two identical, mostly GREEN, poles

B) Plug the dark gray end of one pole's arm into the hub socket of the other pole


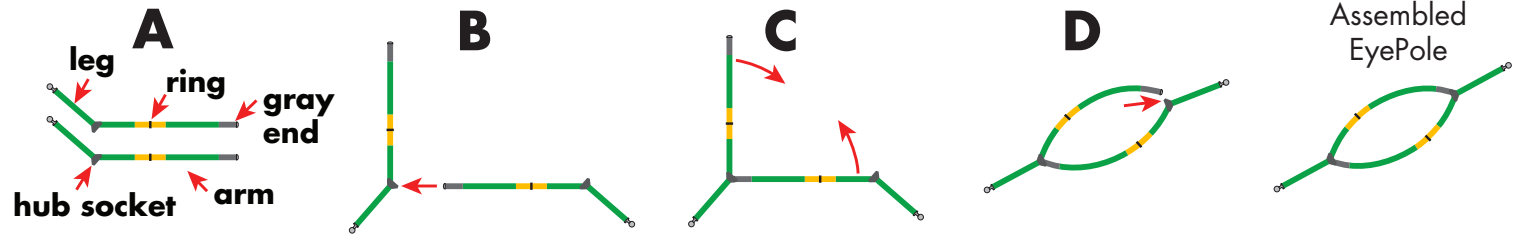


C & D) Flex the two ends together and put the other arm into the socket

<<to take the EyePole apart, pull the dark gray ends out of the hub>>

2) Lay out the tent and put the all-GOLD pole in first by popping the ball-ends into the socket parts on the matching GOLD corner webs << to remove, twist the socket part sideways>>>

3) Lay the EyePole over the tent as shown below. You may need to flip the EyePole over to make the colors match.

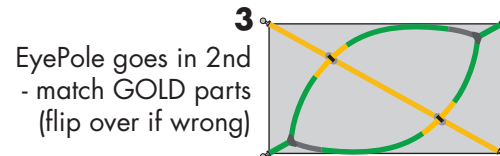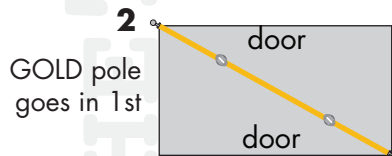

4) Pop the EyePole legs into the other tent corners (they have GREEN webs)

5) Lock the EyePole to the all-GOLD pole. Snap the little black rings in the middle of the EyePole GOLD areas into the fittings on the all-GOLD pole. Lock the poles together with the little black keeper latch.

6) Clip the tent to the poles and you're done

7) ANCHOR THE TENT using the super-adjustable stake loops

Pitching the rainfly

1) Pull out the rainfly and drape it over the tent. You have three orientation aids: the fly corner buckle webs are color-coded to the tent corner webs; the top seam matches the top pole; and the vestibule doors line up in front of the tent doors.

2) Clip the rainfly buckles to the matching tent corners

3) Pull out and anchor the vestibules. Stakes work best when they're about a foot away from the vestibule point.

4) Tighten the rainfly corner buckles

Other Pitches

- A footprint can be attached to the floor of the tent just by looping the footprint cords around the webs attaching the tent's corner hardware (easiest to do before the poles go in)

- The rainfly can be pitched alone with or without a footprint

• The small caps on the end of the fly adjustment buckles clip directly to the pole ball-ends

• The tiny clips on the footprint cords clip to the cords on the end of the fly webs

* Hack - see TheTentLab.com "Techniques and Tips" page to increase the tent's strength by 25% in its weakest direction