



# MoonLight 3 & 4 Set-Up Instructions

## — Socket Hub style (2015/2016 - innie hub)

**PRO TIP:** Watch the setup video on [TheTentLab.com](http://TheTentLab.com) and set-up your tent once before you take it on a trip


- \* Select a spot for your tent that is smooth but slightly angled for drainage. Sleep with your heads UP-slope.
- \* Avoid sites where overhead dead branches or nearby dead trees could fall on you.

### What's included

- Tent and Rainfly
- Main stuffsack
- Poles and bag
- 12 stakes and bag
- Pole repair tube
- Fabric for repairs
- Micro biners (6 or 8)

**1)** Assemble the EyePole before putting it into the tent <<for takedown, remove the EyePole before disassembling>>

- A) The EyePole starts with two identical, GREEN, poles  
 B) Plug the open end of one pole's arm onto the insert of the other pole

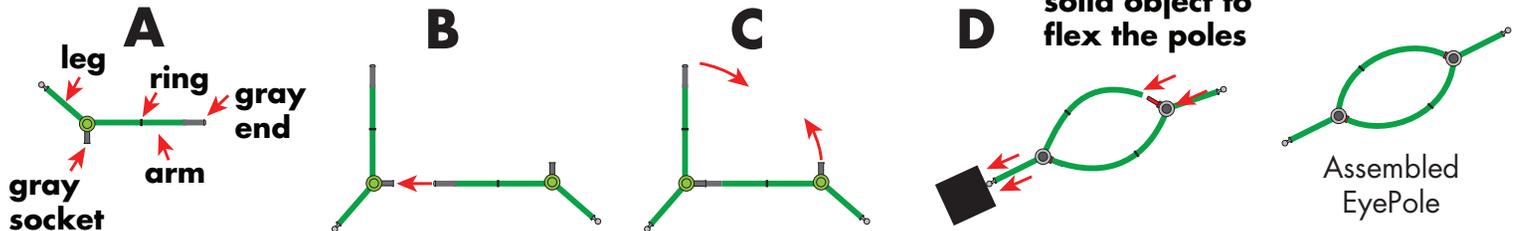


C) MoonLight 3 & 4 poles are quite stout so some technique is important. Hold one free end and have a companion bring you the other free end so you have a pole in each hand.

D) Find a tree or a solid rock (or a friend's foot) to use as a stop to push against. Holding the ends from C, one in each hand, push the far side of the pole against the stop and flex the poles until you can slide the open pole end completely down onto the red insert. It's very important that you don't let go of the poles until the joint is fully engaged.


<<to take the EyePole apart, use exactly the same push/flex technique to slide the open ended pole off the insert. Find the sweet spot where the poles come apart easily and do not release pressure until the poles are fully apart.>>

**2)** Lay out the tent and put the GOLD pole in first by popping the ball-ends into the socket parts on the matching GOLD corner webs << to remove, twist the socket part sideways>>

**3)** Lay the EyePole over the tent as shown below. Pop the EyePole legs into the other tent corners (they have GREEN webs)

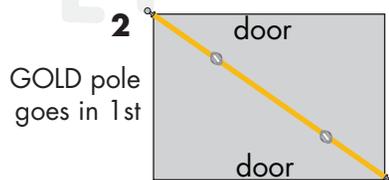

**2**  
GOLD pole goes in 1st

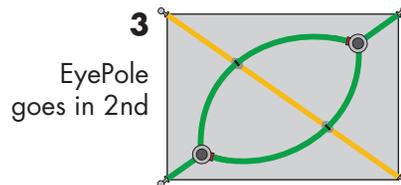

**3**  
EyePole goes in 2nd

**4)** Lock the EyePole to the GOLD pole. Snap the little black rings on the EyePole into the fittings on the GOLD pole. Lock the poles together with the little black keeper latch.

**5)** Clip the tent to the poles and you're done

**6)** ANCHOR THE TENT using the super-adjustable stake loops

### Pitching the rainfly

1) Pull out the rainfly and drape it over the tent. You have three orientation aids: the fly corner buckle webs are color-coded to the tent corner webs; the top seam matches the top pole; and the vestibule doors line up in front of the tent doors.

2) Clip the rainfly buckles to the matching tent corners

3) Pull out and anchor the vestibules. Stakes work best when they're about a foot away from the vestibule point.

4) Tighten the rainfly corner buckles

### Other Pitches

- A footprint can be attached to the floor of the tent just by looping the footprint cords around the webs attaching the tent's corner hardware (easiest to do before the poles go in)

- The rainfly can be pitched alone with or without a footprint

- The small caps on the end of the fly adjustment buckles clip directly to the pole ball-ends

- The tiny clips on the footprint cords clip to the cords on the end of the fly webs